


ON




Press **START** or **SKIP GUIDE**

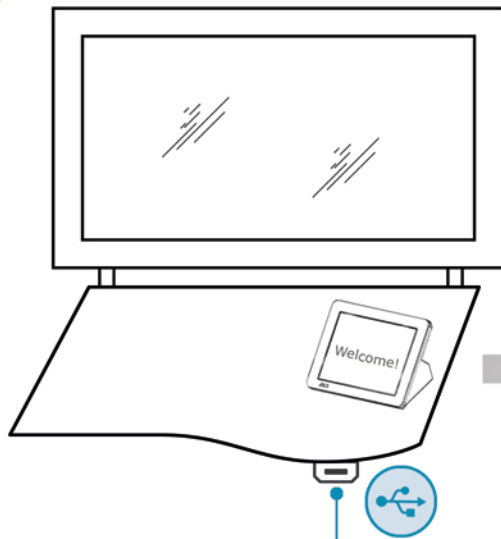


Insert USB flash drive for presentations

OFF

- 1 Stop recording
- 2 Log out on the tablet computer
- 3 Switch off the system at the touchpanel

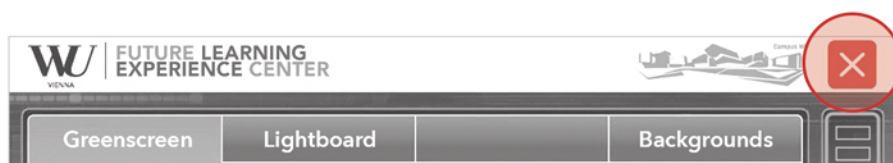


- 4 Clean the lightboard
 Use provided cleaning supplies only



Mind your USB flash drive

AV-SUPPORT

- Use  Report Problem
- Call +43-1-313 36 - 3003